Generated: 25 May, 2013, 04:00 NEED INPUT ON STOVE VS COMPUTER SETTINGS FOR BIXBY Posted by grkrjk - 19 Nov 2012 20:51 OK, FIRST THANKS FOR HELP FROM BLUME AND CORNY FOR YOUR INPUT ALSO. WE HAVE THE BIXBY 115 WE SET THE DIALS ON THE STOVE TO SUGGESTION FROM YOU BLUME, IT HAS BEEN DUMPING AND NOT GOING OUT. IS THE FAN SETTINGS ON THE STOVE DIFFERENT FROM THE LAPTOP SETTINGS? DOES THE FAN AUTOMATICALLY CHANGE WHEN YOU CHANGE HEAT SETTINGS. THE FAN ON THE STOVE IS FOR EXHAUST RIGHT? THERE IS ONLY ONE FAN ADJUSTMENT ON THE LAPTOP. WE NEED THE FAN THAT BLOWS INTO THE ROOM TO BLOW MORE I THINK. WE ARE NOT GETTING THE HEAT FROM THAT FAN AS WELL AS WE WERE. AM I TOTALLY CONFUSEING YOU YET? Re: NEED INPUT ON STOVE VS COMPUTER SETTINGS FOR BIXBY Posted by grkrjk - 20 Nov 2012 01:09 OK MADE THE CHANGES. DO THE OTHER NUMBERS SEEM OK? I WISH I UNDERSTOOD ALL OF THESE THINGS AND WHAT THEY DO OR DON'T DO FOR HEAT EFFICIENCY, BUT I DON'T. Is very confuseing for this lady lol. Re: NEED INPUT ON STOVE VS COMPUTER SETTINGS FOR BIXBY Posted by grkrjk - 20 Nov 2012 01:10

Posted by grkrjk - 20 Nov 2012 01:10 yes, i could feel it farther away from stove, so it is blowing out better. thank you.

Re: NEED INPUT ON STOVE VS COMPUTER SETTINGS FOR BIXBY

Posted by grkrjk - 20 Nov 2012 01:14

Corn Burners Forum - I Burn Corn

Generated: 25 May, 2013, 04:00

starting feed 150

while i am asking ?s on fan and feed numbers per levels, I don't understand why as you level up some

of the settings on higher levels are less than lower levels. ex: on L1 fan is on 80 and on level five it is 79
and the feed on all levels is the same?
Re: NEED INPUT ON STOVE VS COMPUTER SETTINGS FOR BIXBY Posted by Corny - 20 Nov 2012 01:32
Congrats for making the convection fan setting! That's one of the trickier ones to figure out. Essentially the lower the number, the faster the convection fan will spin up to the heat level 6 or so when it maxes out, as Rona said.
Good eye on your heat level settings. They aren't all the same as the factory values, and that also explains your slower conv fan speed at heat level 1. Here are the factory settings, with deviations from yours noted in red.
l1 91
Feed all levels at 100
Ash all level at 9
12 88
13 85
14 82
15 79
16 76
17 73
18 70
starting fan 80

Corn Burners Forum - I Burn Corn

Generated: 25 May, 2013, 04:00

stating time 75

igniter time 75

ash dump fan 80

ash dump feed 85

ash dump target 100%

ash dump target level 4 (you didn't provide this value)

TC FOR 25% FAN 50

TC FOR 100% FAN 170

THERMOSTATE HEAT LEVEL 1

LB THRESHOLD % 35

LB FAN ADJUSTMENT 0

LB FEED ADJUSTMENT 20

To determine how almost any given setting works, click on the HELP button in the Bixcheck Monitor, then click on the button that you want help for.
